



RESET

POWER

P5

P2

S1

R28 R29 C17 C22 U8

L1



S2

BOOT

C15

D3

D1



P1

CAMERA

P9

DC 6-12V

U1

J4

C4

M1

LCD

U11

J1

R4

Q1

Q4

F1

C1

C10

U7

C9 C11 C12 U4

C28 C29 C27 R13 C8 R39 R38 U10

U5

C30

LED1

U6

C7

R5

C24

U2

R34 R6 R35 R10 DS3 DS2 DS4 DS5

R9 T-K210 R8 R-K210 R36 R-WIFI R37 T-WIFI

R14

C16

U9

C20

Maixduino

J2

D5 D4

U13

R19 D6

C25

J3



P6

P3

2832